




This is the Control Power Board for ADC, BLS and Muon LVPS. Top and Bottom traces.

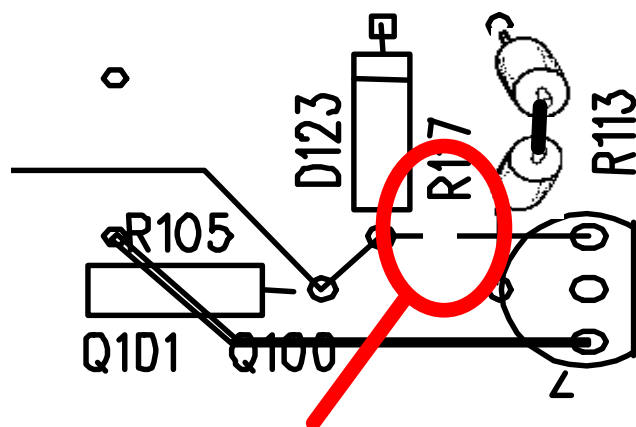

Cut trace between D123 and R117.
Remove R117 and replace with TWO resistors 200 Ω each.

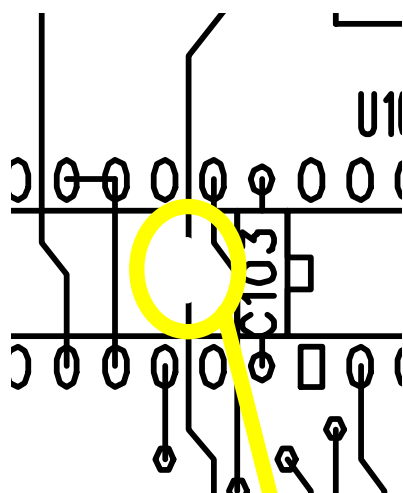

Cut trace on bottom of PC board and add jumper from U102-2 to U102-15. Add jumper from J100-22 to U102-13.

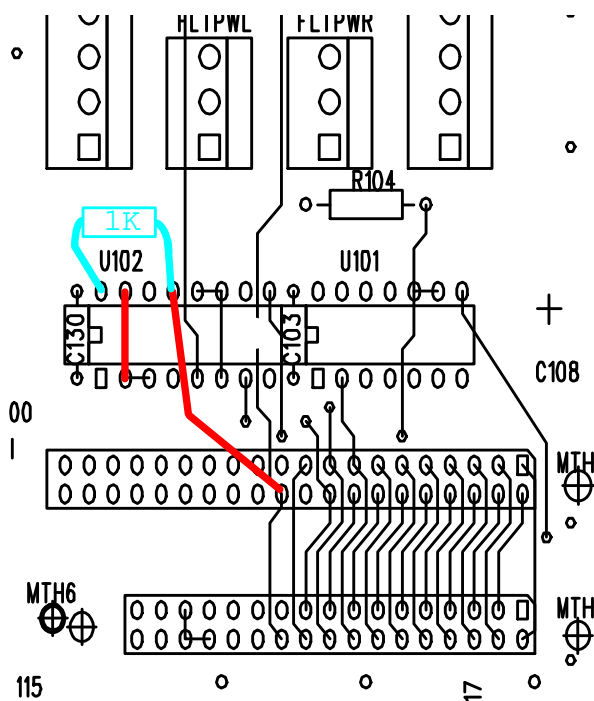

Wire from the two resistors to pin 14 of U102. Wire from pin 13 of U102 to R105-D123 junction. Cut trace on top of PC board between R117 and D123.

